



SETTING UP YOUR CONCRETE R301 SPRAYER 190451



1. Assemble Hose To Tank

IMPORTANT: Do not attempt to heat or alter hose, hose nut, or barb prior to assembly.

1. Align hose barb tabs, push hose barb into tank until it stops (**See Figure A**).
2. Slide hose nut into place and turn clockwise to tighten. (**See Figure B**).

NOTE: Do not use tools to tighten hose nut.

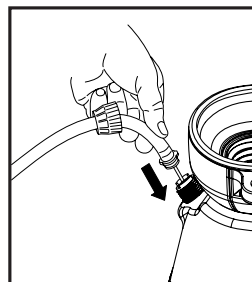


Figure A

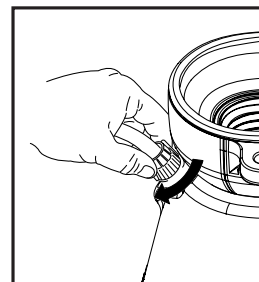


Figure B

2. Assemble 24" Brass Wand

Place 176332 check valve inside of 182566 brass wand. Then place brass teejet nozzle and cap on top and screw into place (**See Figure C**)

Note: Check valve must be always be used.

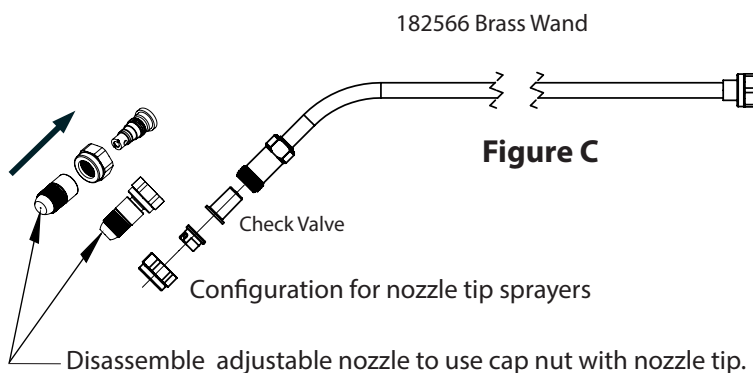


Figure C

3. Assemble XL Valve to Hose

Screw on XL Valve to end of hose from sprayer. Using a 9/16" wrench for sprayer hose and a 3/4" wrench for the XL Valve tighten securely. (**See Figure D**)

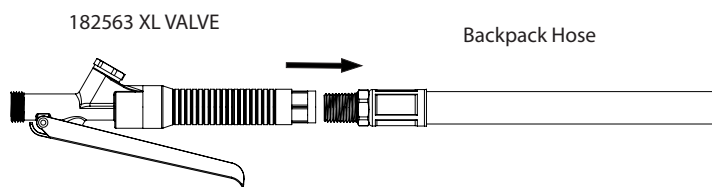


Figure D


4. Assemble Wand to XL Valve

Screw on Wand Assembly to XL Valve using a 13/16" wrench. (**See Figure E**)




Figure E


PARTS INCLUDED WITH YOUR
CONCRETE R301 SPRAYER
190451



182661 ASSEMBLY 24"
BRASS WAND



182629
HOSE ASSEMBLY

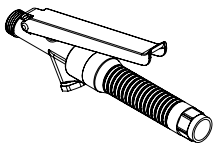

182563
XL VALVE (VITON)



182576
TIP, TEEJET BRASS
TP11010




182577
TIP, TEEJET BRASS
TP9505



176332
CHECK VALVE
POLY PRO BLACK




182618
WARRANTY CARD



182567
ADJUSTABLE
BRASS NOZZLE



181080
CARRYING STRAP

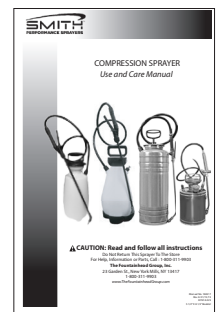

182617
MANUAL